


SECESAFE

Smart 570 Lockwood Cylinder SS570KS/B

Our smart 570 cylinder lock enables you to grant access with ease using custom pin codes & through the smartphone app, The user-friendly interface and Bluetooth technology enables users to generate passcodes from 4-8 digits making it convenient and secure. For added security, the smart cylinder lock supports anti-peeping technology to deter intruders from gaining entry.

The TLock platform provides an easy to use, secure platform to efficiently manage your smart lock. Send temporary passcodes, add/delete passcodes and ekeys and access audit trails all from your smart phone. The SS570KS is also compatible with MiFare cards. Up to 150 cards/fingerprints can be added to the device. These credentials can be managed (added/removed) through the TLock app for greater convenience and security.

Access a real-time audit trail of who accessed the lock and when via the TLock app and the desktop program (when using the gateway). Remain up-to-date & have permanent records of access to your property for enhanced security.

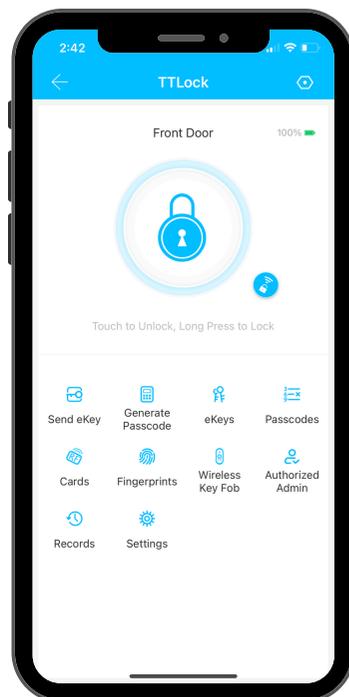

**TTLock Available
on iOS & Android
Search for "TTLock"**



SECESAFE

SS570KS Silver Finish



SS570KB Black Finish



SECESAFE



SECESAFE



Features

TTLock App

The “TTLock” app can be used to manage the smart cyl. This includes creating Authorised Administrators, creating codes and eKeys for users, and opening the Lock using Bluetooth via the app.

Pin and swipe card access

can be added through the TTLock app for up to 100 users.

Auto Lock

After successfully unlocking, the Bluetooth Lock will automatically lock after a period of time (between 5 and 120 seconds). The owner sets this function according to their needs.

Lower Battery Consumption

1 x CR123A batterie can provide 5000 openings. Battery status can be viewed in real time from the TTLock App. When the batteries are low, cylinder t will emit low battery warning to users.

Emergency Unlock. Use one of the 2 mechanical keys or power a bank with a USB C cable (not included) to provide power and open the lock should the batteries go flat.



Decoy Code

8 decoy digits can be entered prior to the actual code to prevent the code from being exposed.

The TTLock App can be used with multiple locks: Ensure you select the correct device when managing settings or adding users.

SECESAFE


SS570F DIMENSIONS

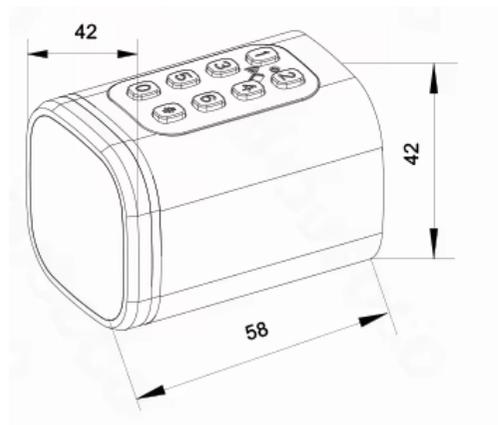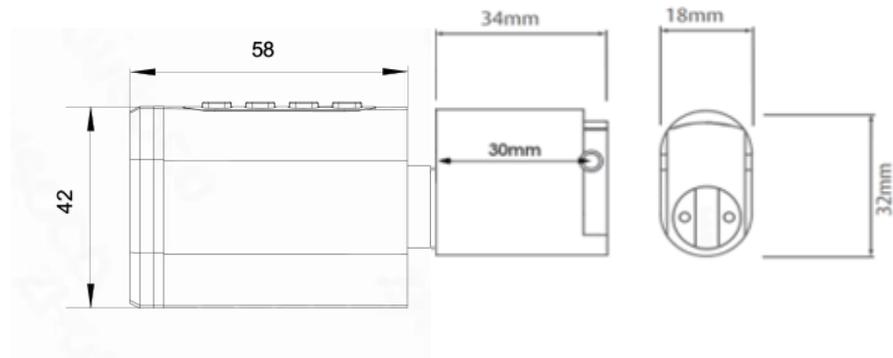

What in SS570FS the box



Smart Lock

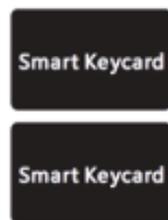

Epoxy Card



Manual Key



Sucker





Tool




Manual

SS570K Product Specifications

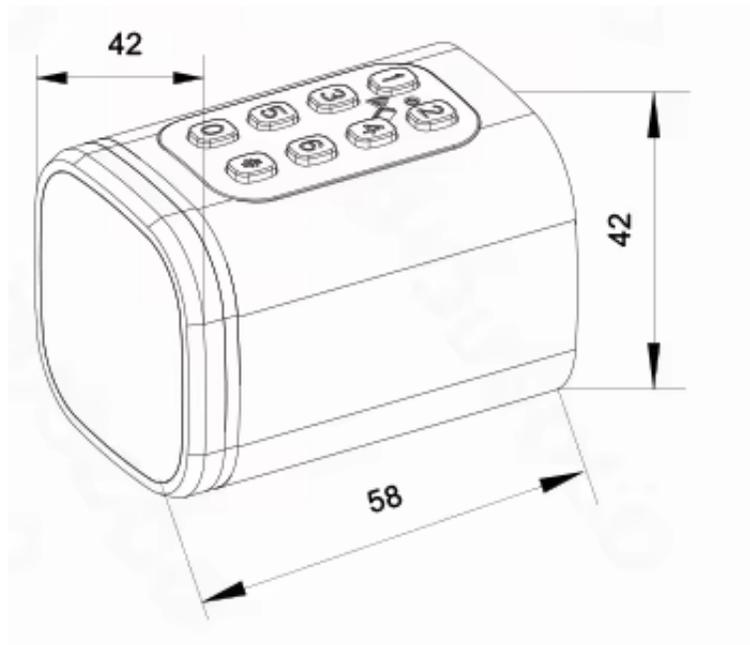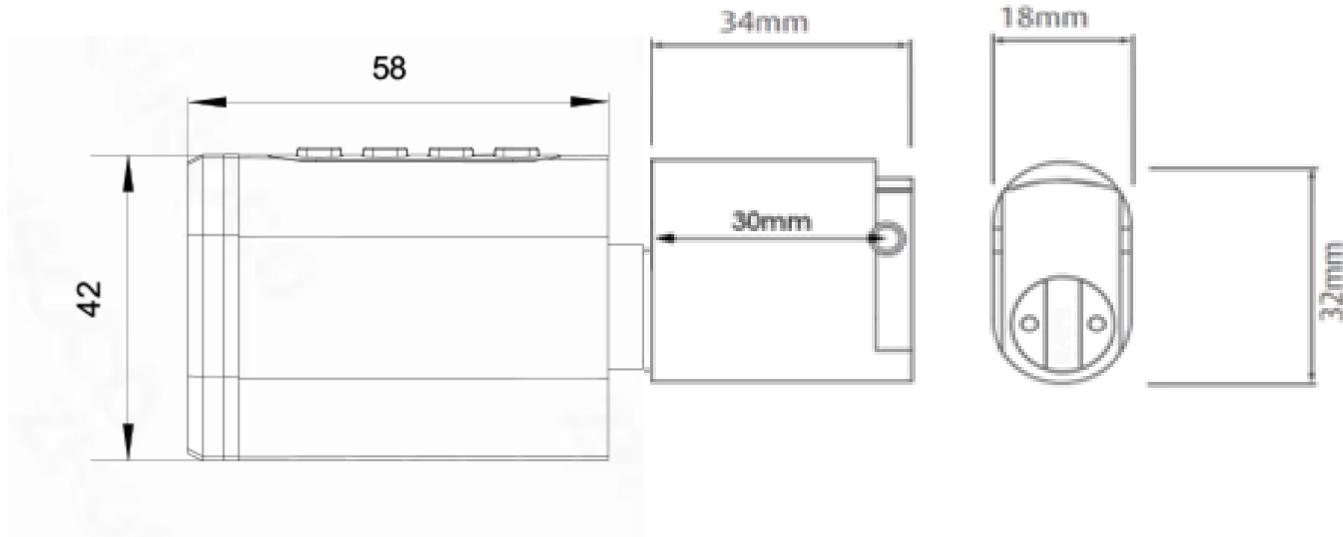

Product Code	SS570F
Ingress Protection (IP) Rating	Not IP Rated - Internal Door Use Recommended
Bluetooth Comms Distance	8 Metres (walls impede signal)
Communication Mode	BLE 4.0 (Bluetooth Low Energy)
Unlocking Options	Bluetooth App, Code, MiFare Fob, Fingerprint, Remote
OS Support	iOS 9+ / Android 5+ / MacOS 11 + M1 Mac
Unlock Time	~1.5 sec
Power Supply	1 x CR123A

Installation of the SS570KS

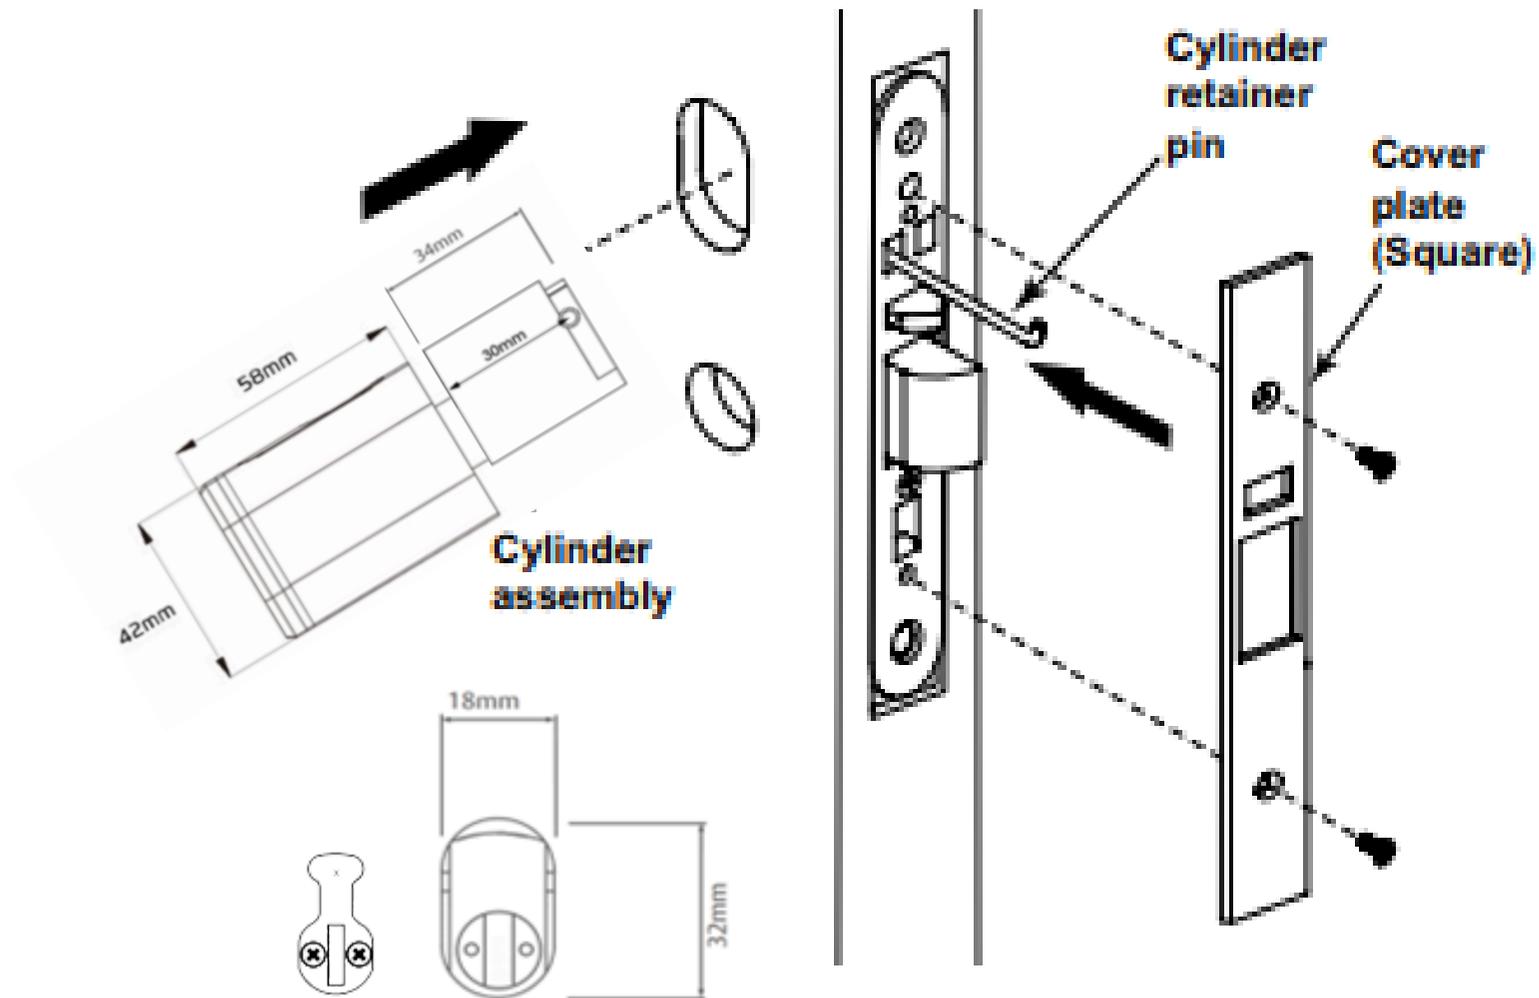

INSTALLING SMART LOCKS CYLINDER

Open the door and remove the 2 face plate screws as above, then remove the cylinder (cyl) retuning screw on the cylinder site gently slide existing cyl out. Swap the existing cam on back of the cyl using a small Phillip's head screw driver and put cam on to Smart cyl with 3mm supplied screws. Insert cylinder in to cutout till firm then re fit cylinder retainer pin, ensuring pin is flush with front plate. Install Cover plate and secure with screws to lock body. Test door in open position to ensure it works.

SECESAFE

Initial Smart Lock Set Up

1 Download TTLock App

Search 'TTLock' on the App Store or Google Play store & download the app.



2 Register & Log In

Users can register the account by email or mobile number. When registering users will receive a 'verification code' from email or mobile.

3 Add Device

Add the keypad by going to the menu bar in the app. Select 'Add Lock' & select 'Door Lock' or 'All Locks'

For more in-depth resources scan the QR code below:


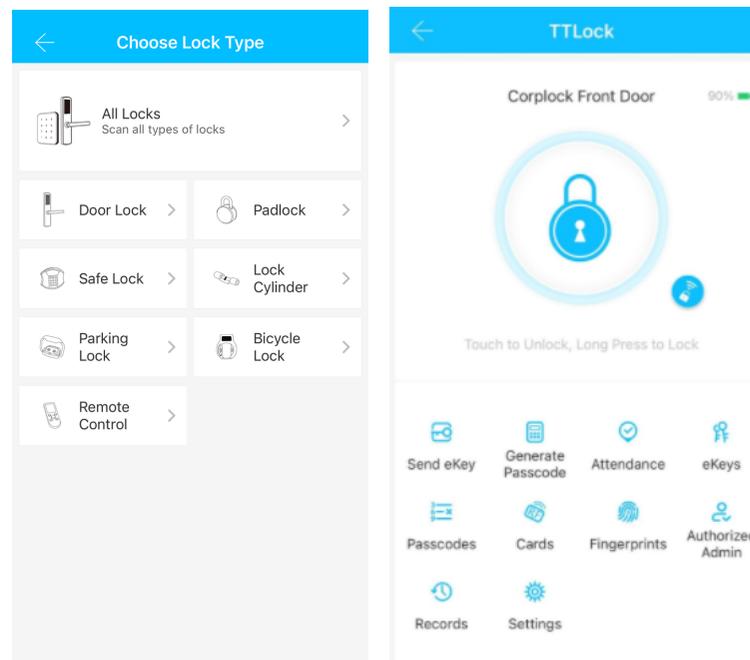
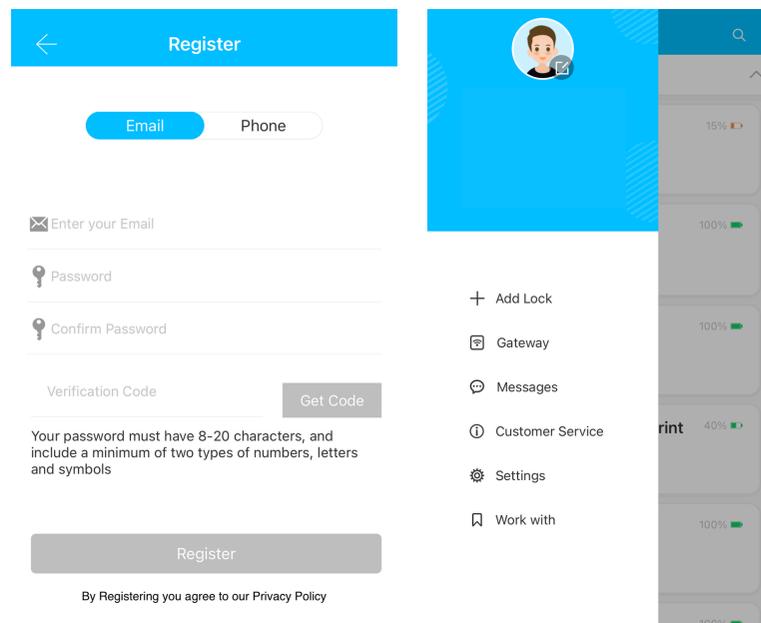


SECESAFE

Installing TTLock

Search for "TTLock" on the App Store

🔍 TTLock ✕ Cancel

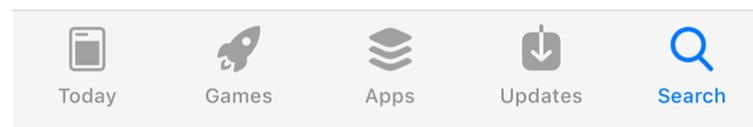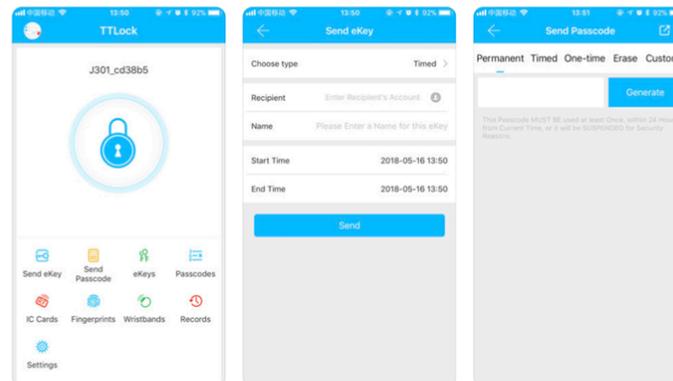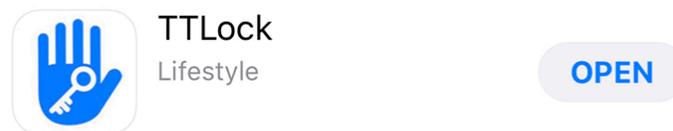

Android





Apple (iOS)



SECESAFE

Programming Passcodes, Cards & Remotes

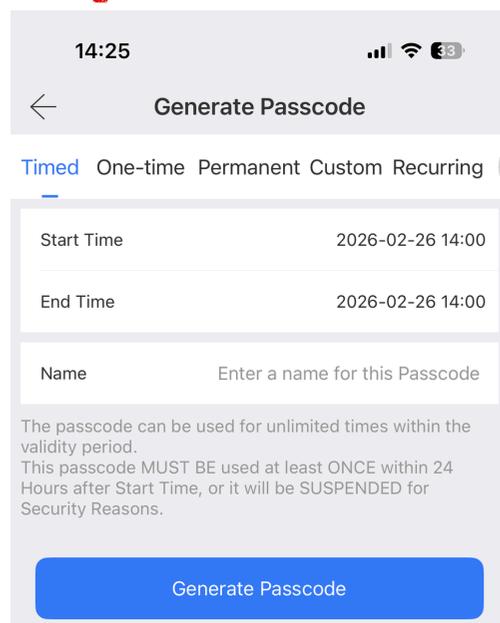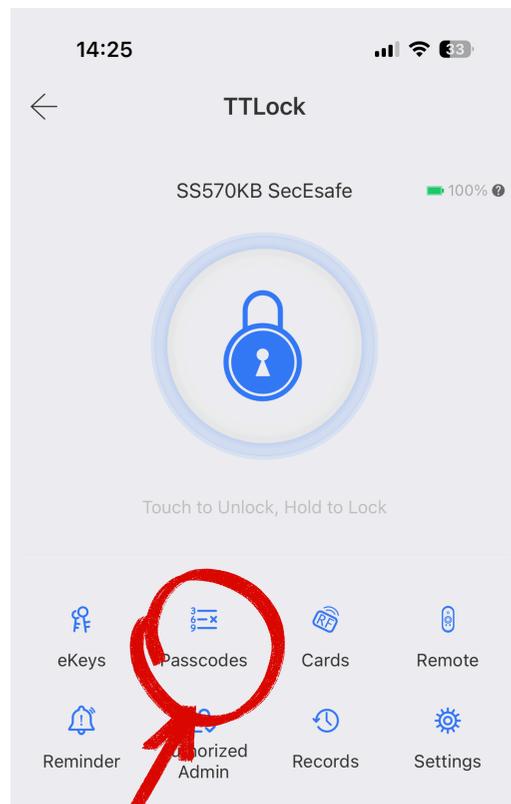

These steps are similar for: Cards, Fingerprints & Wireless Remotes

1. Select the lock you wish to add users to.
2. Press "**Cards**", "**Passcodes**" or "**Remote**", depending on what credential you wish to add.
3. Press the "**Add Passcodes /IC Card/Remote**" button
4. Enter a name for the credential, & specify whether it is permanent or will only work for a limited time.
5. Follow the prompts to add the credential. The software will ask you to present the card to the lock, place your finger on the fingerprint reader or press a button on the remote.
6. Once this is complete, "**Operation Successful**" will show, & you will return to a screen showing the new credential


Wireless Remotes are not compatible with all locks.

Settings → Firmware Update: Version 5.3.3.2 and above



SECESAFE

Enabling Remote Unlock

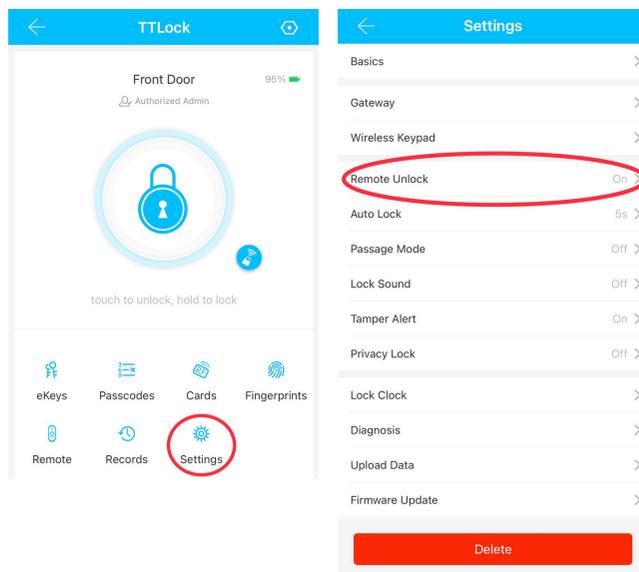

1. Open "TTLock"
2. Select the lock, then select "Settings"
3. Select the "Remote Unlock" setting
4. Press the button to turn **ON** "Remote Unlock"
5. Repeat this process for each lock that will connect to the gateway.



secasafe.com/CLBTG2W



secasafe.com/CLBTG3E

Gateway Setup

1. Open "TTLock" and press the menu button. ("Hamburger"/3 horizontal lines) ☰
2. Select the "Gateway" option, then press the "+" icon.
3. Connect the G2/G3 Gateway to your network using 2.4GHz Wi-Fi or an Ethernet cable.
4. Press the "G2" or "G3" Gateway option, then power the gateway using the included USB-C cable. The light will start blinking Blue & Red.
5. Choose the Gateway from the list, name it & move to the next page.
6. The gateway will then search for nearby locks.
7. Afterwards, the connected locks will be shown as well as their signal strength.

For more information on Gateway Setup scan the QR Codes above

